

# TECH BULLETIN

## WIN2800

### WIRELESS REMOTE



**NUMBER ON REMOTE AND RECEIVER MUST MATCH**

**PUSH IN BUTTON AND IT WILL WORK UNTIL YOU PUSH THE STOP BUTTON  
PUSH THE OUT BUTTON AND IT WILL WORK UNTIL YOU PUSH THE STOP BUTTON**

**BLUE** wire attaches to the outside of the solenoid

**YELLOW** wire attaches to the inside of the solenoid

**RED** wire attaches to battery + (POSITIVE)

**BLACK** wire attaches to battery - (NEGATIVE)